





- 1** Identify all tent components (see list below).

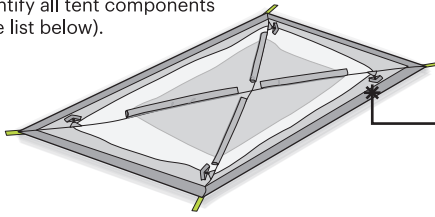

- 2** Spread out tent body and locate 4 eave hubs.

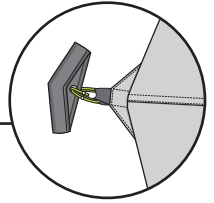



- 3** Assemble 2 roof poles and the 4 leg poles.

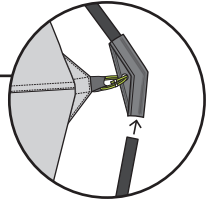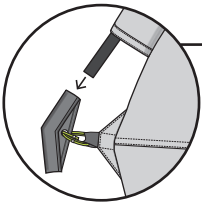

- 4** Gently slide roof poles through pole sleeves. Insert roof poles into the RIBBED end of eave hubs.



- 5** Insert open end of leg poles into eave poles.

- 6** Insert metal pin into bottom of each leg pole.

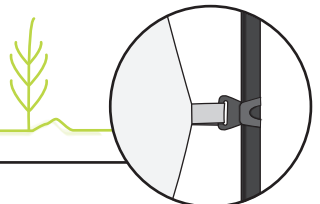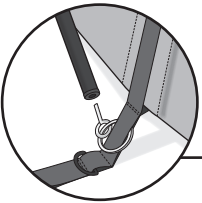

- 7** Attach all tent body clips to frame and stake down 4 webbing loops.

- 8** Place fly over tent body. Match the corresponding **ORANGE** and **BLACK** webbing on the fly and tent for correct orientation. Locate hook and loop fasteners on underside of fly and attach to leg poles.

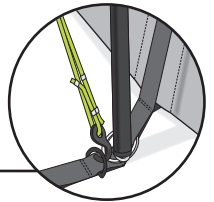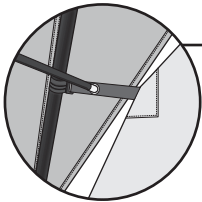

- 9** Assemble fly brim pole. Gently slide the brim pole through pole sleeve on the fly above the door. Insert ends of brim pole into grommet webbing

- 10** Secure fly to tent by attaching fly hooks to plastic rings located on corner webbing. Stake out all guy lines.

TENT CONTENTS

Tent body + Tent fly
Steel leg poles (4)
Fiberglass roof poles (2)
Fiberglass fly brim pole (1)
Gear lofts (2)
Stakes (8) + Guy lines (4)

QUESTIONS?

Johnson Outdoors Gear, Inc.
USA: 1-800-572-8822
www.eurekacamping.com
Johnson Outdoors Canada
Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.