
Eureka!

INSTRUCTIONS | Copper Canyon LX 8 (2601309)

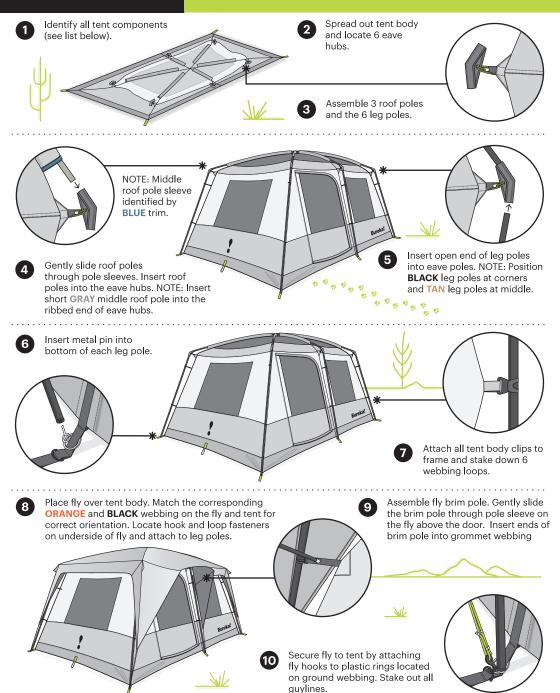

TENT CONTENTS

Tent body + Tent fly Steel leg poles: (4) black corner + (2) tan middle Fiberglass roof poles: (2) black long + (1) gray middle Fiberglass fly brim pole (1) Gear lofts (2) + Divider curtain Stakes (14) + Guy lines (6)

QUESTIONS?

Jonson Outdoors Gear, Inc. USA: 1-800-572-8822 www.eurekacamping.com Jonson Outdoors Canada Canada: 1-800-263-6390 www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

• Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.