






- 1** Identify all tent components (see list below).

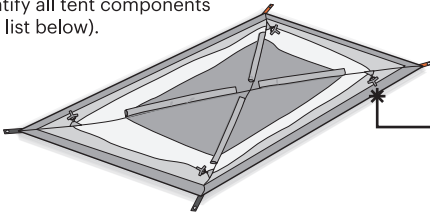

- 2** Spread out tent body and locate 4 eaves with hubs.

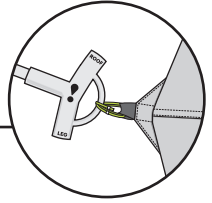


- 3** Assemble 2 roof poles and the 4 leg poles.

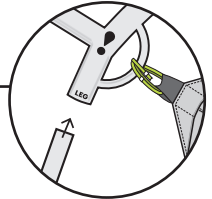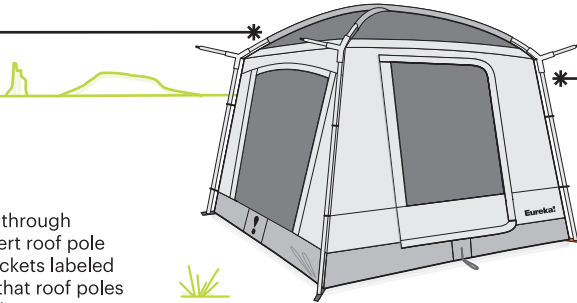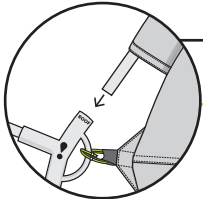

- 4** Insert roof poles through pole sleeves. Insert roof pole ends into hub sockets labeled "ROOF". Ensure that roof poles arch in a dome-like manner.

- 5** Insert leg poles into hub sockets labeled "LEG".



- 6** Insert leg pole tips into each of the 4 corner grommets.

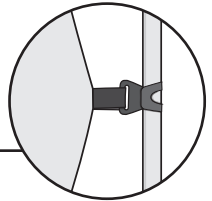

- 7** Attach all tent body clips to frame and stake down 5 webbing loops.

- 8** Place fly over tent body. Match the corresponding **GRAY** and **ORANGE** webbing on the fly and tent for correct orientation. Locate clips on underside of fly and attach to leg poles.

- 9** Assemble fly brim pole. Gently slide the brim pole through pole sleeve on fly above door. Insert ends of brim pole in webbing grommets.

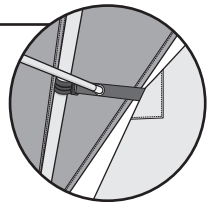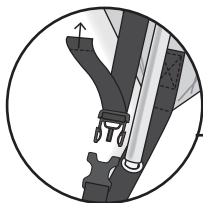

- 10** Connect matching buckles on fly and tent body at 4 corners. Adjust fly tension via corner webbing.

- 11** Stake down all guylines.

### TENT CONTENTS

Tent body + Tent fly  
Steel leg poles (4)  
Aluminum roof poles (2)  
Aluminum fly brim pole (1)  
Corner hubs with extensions (4)  
Stakes (9) + Guylines (4)

### TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

### TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

### QUESTIONS?

Johnson Outdoors Gear, Inc.  
USA: 1-800-572-8822  
www.eurekacamping.com  
Johnson Outdoors Canada  
Canada: 1-800-263-6390  
www.eurekatentscanada.com

### WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.