



- 1** Identify all tent components (see list below).


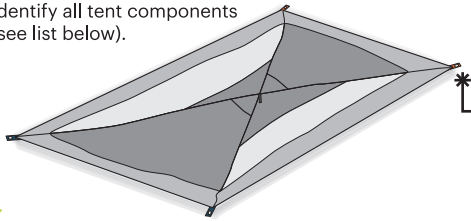


- 2** Spread out tent body and locate 4 corner webbing loops with grommets.

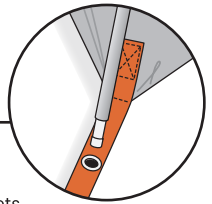


- 3** Assemble 2 frame poles. Insert frame pole tips into each of the 4 corner grommets. Poles should be in an X orientation.

- 4** Attach all tent clips to poles.

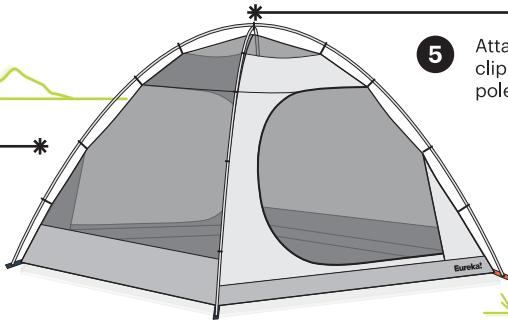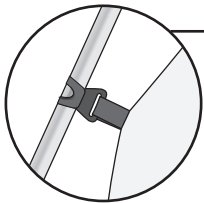


- 5** Attach peak clip to top pole.

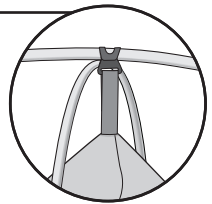

- 6** Stake out 4 corners of tent.





- 7** Assemble fly poles. Insert ends of fly poles into pole pockets located on underside of fly. Fly poles should be parallel.

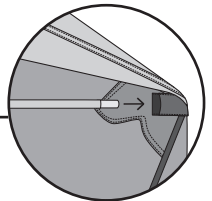

- 8** Place fly over tent body. Match corresponding **BLUE** and **ORANGE** webbing on fly and tent for correct orientation.

- 9** Connect hook and loop fasteners located on underside of fly around tent poles.

- 10** Connect matching buckles on fly at 4 corners. Adjust fly tension via corner webbing. Stake out vestibules.

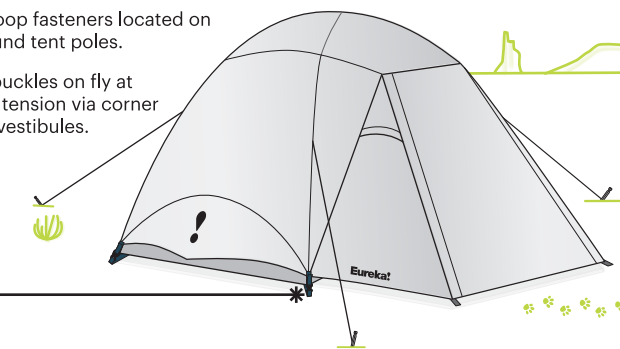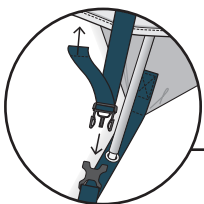

- 11** Stake out all guylines.

TENT CONTENTS

Tent body
Tent fly
Aluminum frame poles (2) LONG
Aluminum fly poles (2) SHORT
Aluminum stakes (14)
Guylines (6)

QUESTIONS?

Johnson Outdoors Gear, Inc.
USA: 1-800-572-8822
www.eurekacamping.com
Johnson Outdoors Canada
Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.