


### SET UP USING POLES

- 1 Identify all tent components (see list below).

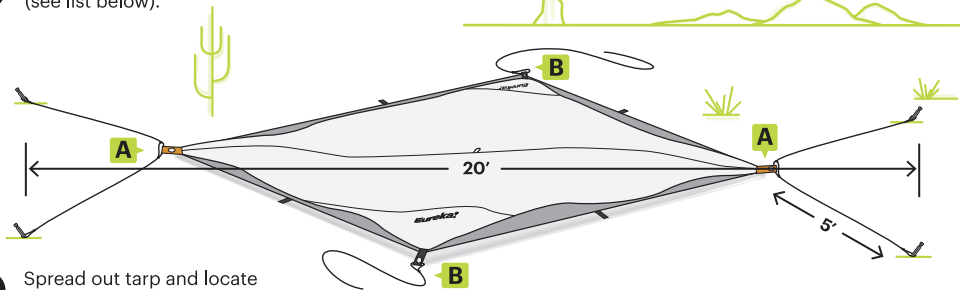


- 2 Spread out tarp and locate the guylines attachment points at front/rear peaks (A) (YELLOW) and side eaves (B) (BLACK).

- 3 Stake out front/rear peak guylines in a V orientation. (5 ft from the foot of tarp, 20 ft from each other).

- 4 Assemble poles and adjust length to 7 ft.


- 5 Insert support pole tip into grommet at front peak. Adjust the guylines and lift pole into angled position (as shown) so that the pole is self-standing.

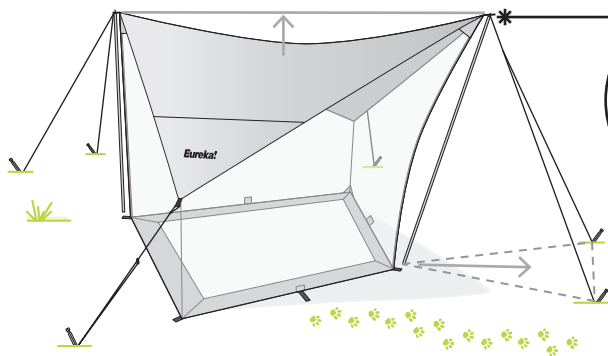

- 6 Repeat step 6 for rear peak.

- 7 Slowly move both poles into vertical position while adjusting guylines tension so that tarp ridge line is taut. Stake out side eaves and all floor locations.

### SET UP USING TREES

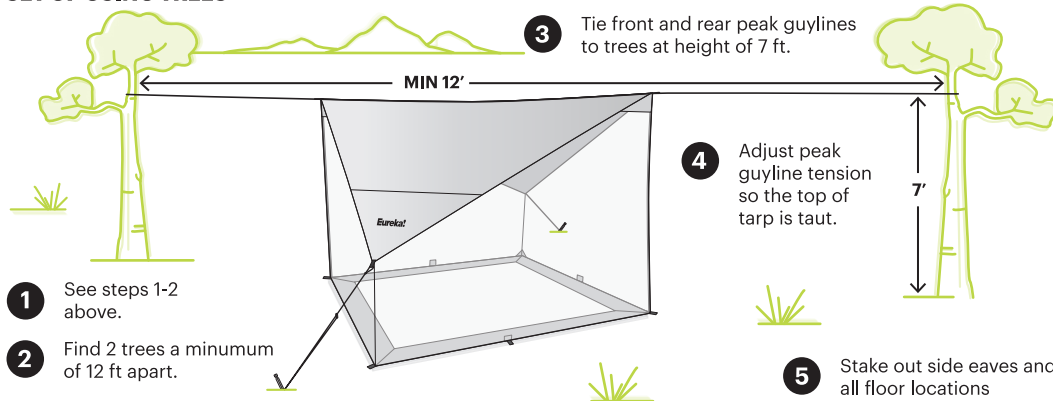

- 1 See steps 1-2 above.

- 2 Find 2 trees a minimum of 12 ft apart.

- 3 Tie front and rear peak guylines to trees at height of 7 ft.

- 4 Adjust peak guylines tension so the top of tarp is taut.

- 5 Stake out side eaves and all floor locations

### TENT CONTENTS

Tarp  
Poles (2) SOLD SEPARATELY  
Stakes (14)  
Guylines (6)

### QUESTIONS?

Johnson Outdoors Gear, Inc.  
USA: 1-800-572-8822  
[www.eurekacamping.com](http://www.eurekacamping.com)

Johnson Outdoors Canada  
Canada: 1-800-263-6390  
[www.eurekatentscanada.com](http://www.eurekatentscanada.com)

### TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

### TENT CARE

- Connect all hook and loop fasteners before packing tent to avoid snagging and damaging the mesh.
- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

### WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.