


### SET UP USING POLES

- 1** Identify all tent components (see list below).

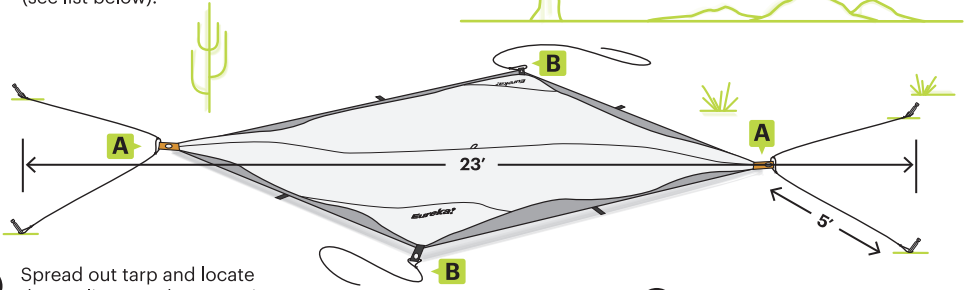


- 2** Spread out tarp and locate the guyline attachment points at front/rear peaks (A) (YELLOW) and side eaves (B) (BLACK).

- 3** Stake out front/rear peak guylines in a V orientation. (5 ft from the foot of tarp, 23 ft from each other).

- 4** Assemble poles and adjust length to 7.5 ft.


- 5** Insert support pole tip into grommet at front peak. Adjust the guylines and lift pole into angled position (as shown) so that the pole is self-standing.

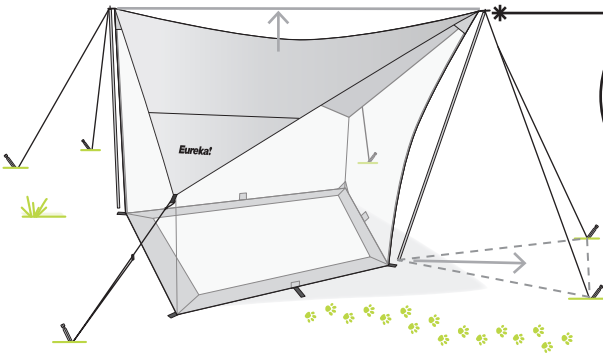

- 6** Repeat step 6 for rear peak.

- 7** Slowly move both poles into vertical position while adjusting guyline tension so that tarp ridge line is taut. Stake out side eaves and all floor locations.

### SET UP USING TREES

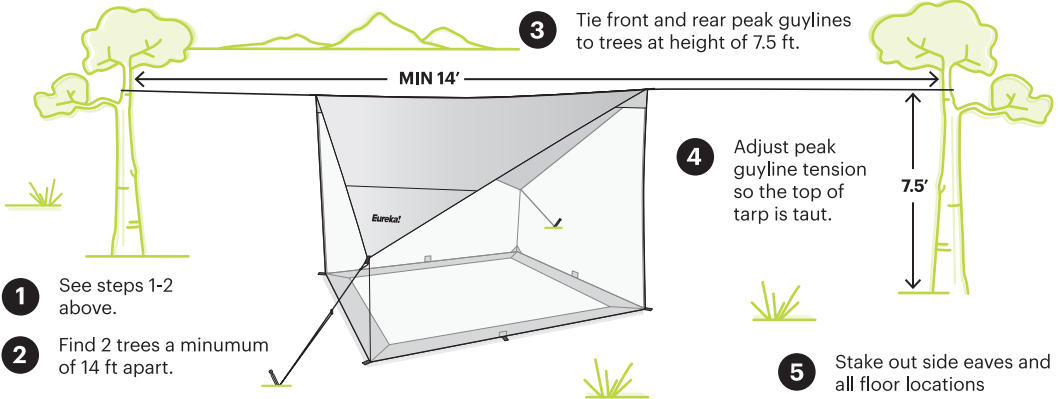

- 1** See steps 1-2 above.

- 2** Find 2 trees a minimum of 14 ft apart.

- 3** Tie front and rear peak guylines to trees at height of 7.5 ft.

- 4** Adjust peak guyline tension so the top of tarp is taut.

- 5** Stake out side eaves and all floor locations

### TENT CONTENTS

Tarp  
Poles (2) SOLD SEPARATELY  
Stakes (14)  
Guylines (6)

### QUESTIONS?

Johnson Outdoors Gear, Inc.  
USA: 1-800-572-8822  
www.eurekacamping.com

Johnson Outdoors Canada  
Canada: 1-800-263-6390  
www.eurekatentscanada.com

### TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

### TENT CARE

- Connect all hook and loop fasteners before packing tent to avoid snagging and damaging the mesh.
- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

### WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.