





- 1** Identify all tent components (see list below).

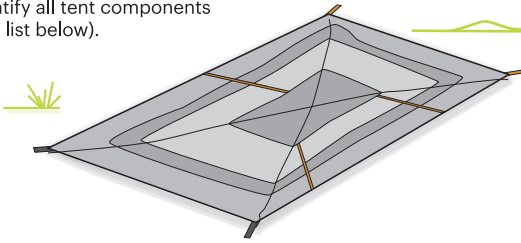



- 2** Spread out tent body and identify the front (2 zippers) and rear (1 zipper) of the tent.

- 3** Assemble all poles.

- 4** Orient peak hub assembly so that the wider angles are facing the front and rear of screenhouse.

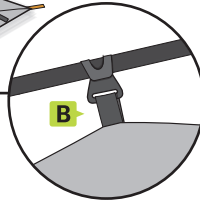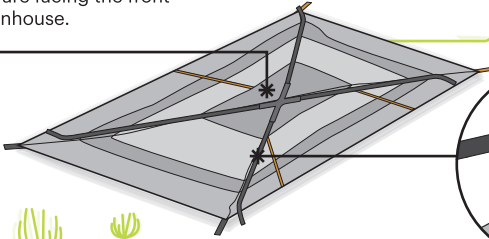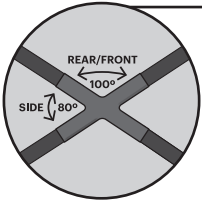

- 5** Attach roof clips to top poles.

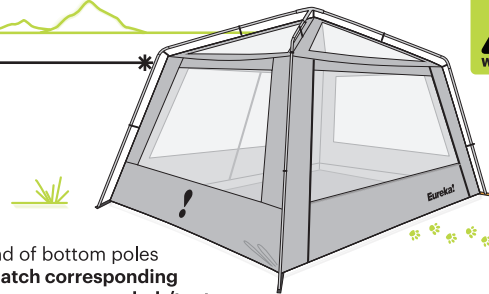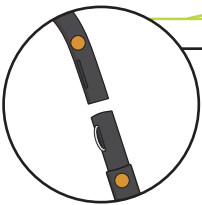



**WARNING** Ensure that peak hub, roof pole, and leg pole sticker colors match the corner webbing. Improper hub/frame alignment will damage the frame.




- 6** Insert tapered end of bottom poles into top poles. **Match corresponding sticker colors to ensure proper hub/tent alignment.** Ensure that locking clips have engaged.

- 7** Insert metal pin into end of each bottom pole.

- 8** Attach all remaining clips to poles and stake down 4 corners. **NOTE: 4 corners of tent must be staked down to ensure stability and operation.**

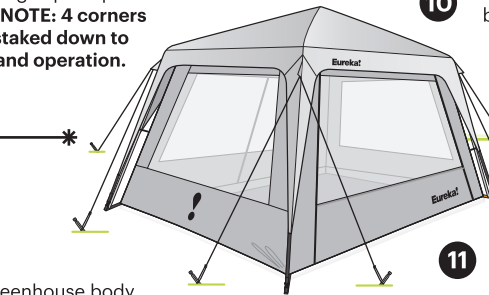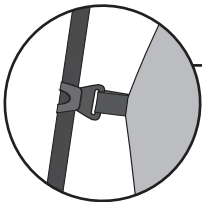

- 10** Secure fly to screenhouse by connecting buckles on fly at 4 corners of screenhouse.

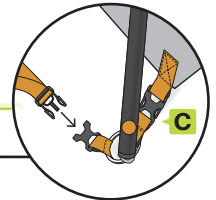

- 9** Place fly over screenhouse body. Match **YELLOW** and **BLACK** webbing on fly and tent for correct orientation. Locate hook and loop fasteners on underside of fly and attach to poles.

- 11** Stake all guylines as shown. **NOTE: 8 guylines must be deployed as shown to ensure proper stability and operation.**

- 12** **Open Shelter Conversion:** (A) Detach peak hook, (B) all pole clips, and (C) 4 corner buckles to remove inner shelter.

### TENT CONTENTS

Screenhouse body + fly  
Peak hub + top pole assembly (1)  
Steel bottom poles (4)  
Plastic stakes (9)  
Steel stakes (8)  
Guy lines (8)

### QUESTIONS?

Johnson Outdoors Gear, Inc.

USA: 1-800-572-8822

www.eurekacamping.com

Johnson Outdoors Canada

Canada: 1-800-263-6390

www.eurekatentscanada.com

### TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

### TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

### WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.