




- 1** Identify all tent components (see list below).

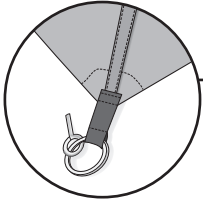



- 2** Spread out the tent and locate the 4 corner webbing loops with ring and pin assemblies.

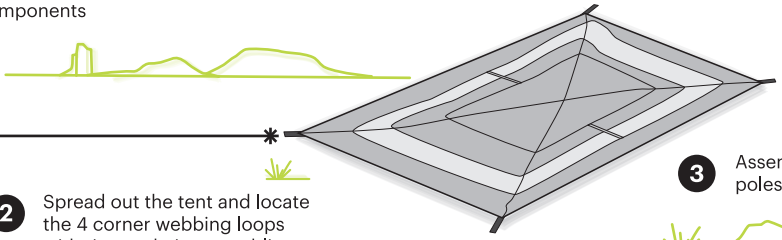


- 3** Assemble all poles.

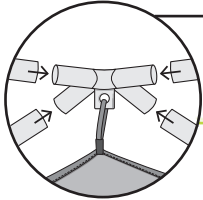


- 4** Insert peak hub extensions into straight end of roof poles.

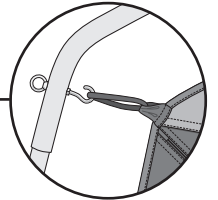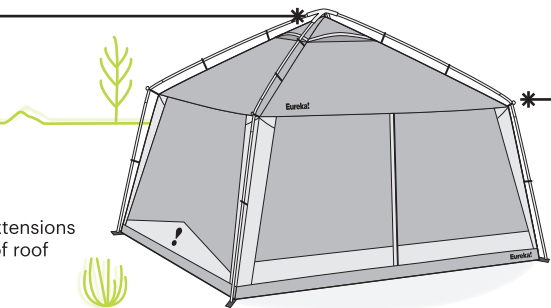


- 5** Attach roof clips to top poles and eave shockcord to eave hooks.

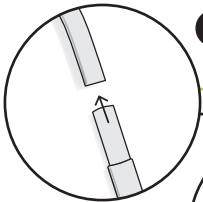


- 6** Insert tapered end of bottom poles into top poles.

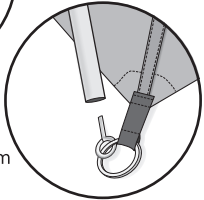

- 7** Insert metal pin into end of each bottom pole.

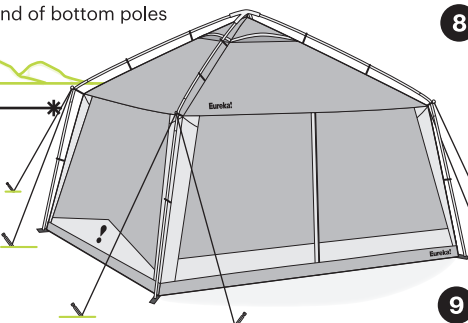



- 8** Attach all remaining clips to poles.

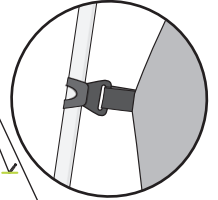


- 9** Stake 4 corners and 8 guylines as shown.

AWNING SET UP

- 1** Unzip gussets and extend awning fabric.

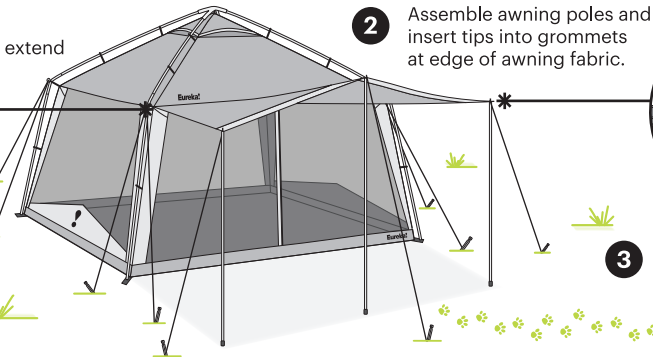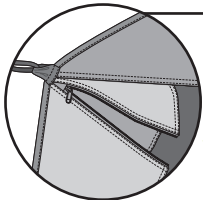

- 2** Assemble awning poles and insert tips into grommets at edge of awning fabric.

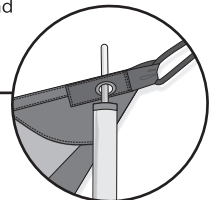

- 3** Attach guylines to awning pole tips and guy out as shown.

TENT CONTENTS

Screenhouse body with hub
 Aluminum roof poles (4) CURVED
 Aluminum leg poles (4) STRAIGHT
 Aluminum awning poles (3)
 Stakes (3) LONG
 Stakes (16) SHORT
 Guy lines (11)

QUESTIONS?

Johnson Outdoors Gear, Inc.
 USA: 1-800-572-8822
www.eurekacamping.com
 Johnson Outdoors Canada
 Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.