

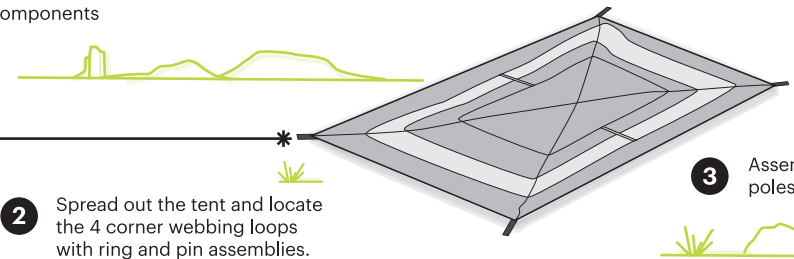
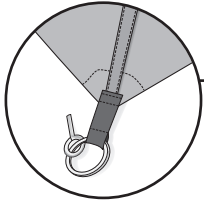


- 1** Identify all tent components (see list below).

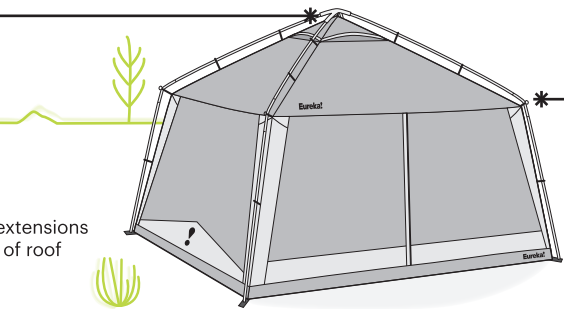


- 2** Spread out the tent and locate the 4 corner webbing loops with ring and pin assemblies.


- 3** Assemble all poles.

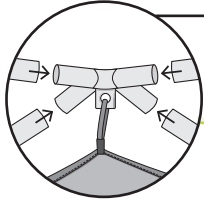


- 4** Insert peak hub extensions into straight end of roof poles.

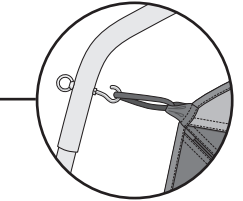


- 5** Attach roof clips to top poles and eave shockcord to eave hooks.

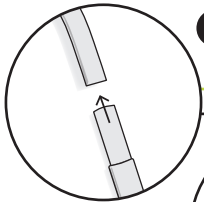


- 6** Insert tapered end of bottom poles into top poles.

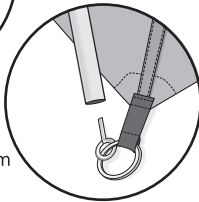

- 7** Insert metal pin into end of each bottom pole.

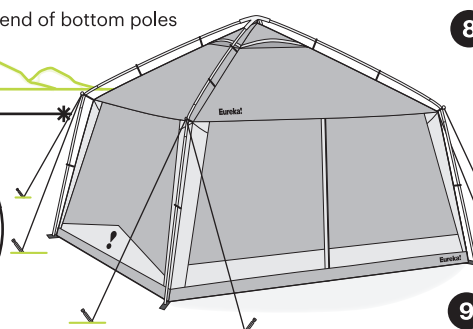


- 8** Attach all remaining clips to poles.

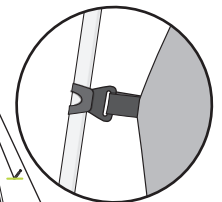


- 9** Stake 4 corners and 8 guylines as shown.

### AWNING SET UP

- 1** Unzip gussets and extend awning fabric.

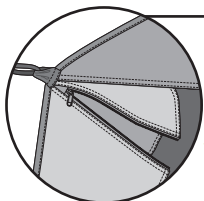

- 2** Assemble awning poles and insert tips into grommets at edge of awning fabric.

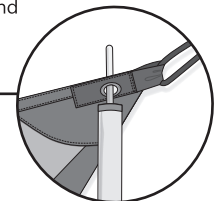

- 3** Attach guylines to awning pole tips and guy out as shown.

### TENT CONTENTS

Screenhouse body with hub  
 Aluminum roof poles (4) CURVED  
 Aluminum leg poles (4) STRAIGHT  
 Aluminum awning poles (3)  
 Stakes (3) LONG  
 Stakes (16) SHORT  
 Guy lines (11)

### QUESTIONS?

Johnson Outdoors Gear, Inc.  
 USA: 1-800-572-8822  
[www.eurekacamping.com](http://www.eurekacamping.com)  
 Johnson Outdoors Canada  
 Canada: 1-800-263-6390  
[www.eurekatentscanada.com](http://www.eurekatentscanada.com)

### TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

### TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

### WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.