



- 1** Identify all tent components (see list below).


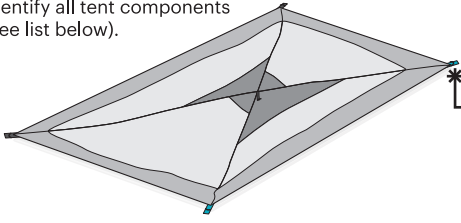


- 2** Spread out tent body and locate 4 corner webbing loops with ring and pin assemblies.

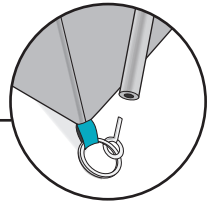


- 3** Assemble 2 frame poles. Insert 4 pins into each of the pole ends. Poles should be in an X orientation.


- 4** Attach all tent clips to poles.

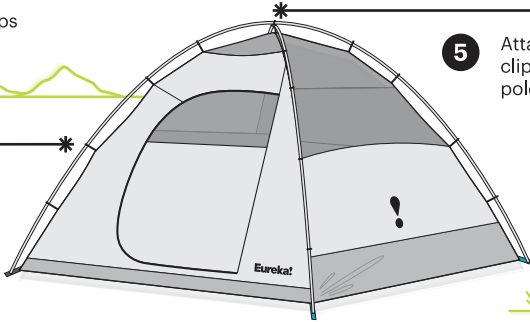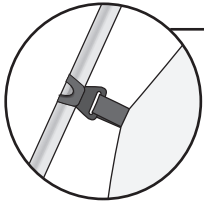

- 5** Attach peak clip to top pole.

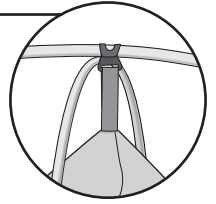

- 6** Stake out 4 corners of tent.

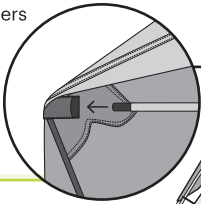


- 8** Place fly over tent body. Match corresponding **BLACK** and **BLUE** webbing on fly and tent for correct orientation.

- 7** Assemble fly poles. Insert ends of fly poles into pole pockets located on underside of fly. Poles should be parallel.

- 9** Connect hook and loop fasteners located on underside of fly around tent poles.

- 10** Hook fly to tent rings at 4 corners.

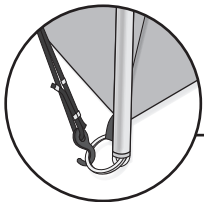

- 11** Stake out all guylines. Additional stakes and guylines required.

TENT CONTENTS

Tent body + Tent fly
 Fiberglass frame poles (2) LONG
 Fiberglass fly poles (2) SHORT
 Steel stakes (4)
 Gear loft

QUESTIONS?

Johnson Outdoors Gear, Inc.
 USA: 1-800-572-8822
www.eurekacamping.com
 Johnson Outdoors Canada
 Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.