# **Eureka!**

# **INSTRUCTIONS | Timberline SQ Outfitter 6 (2629220)**



## **TENT CONTENTS**

Tent body + Tent fly Leg poles (4) Ridge pole assembly with hubs (1) Spreader pole (1) short Frame field repair sleeve (1) Steel stakes (8) + Plastic stakes (4) Guylines (4)

### **QUESTIONS?**

Johnson Outdoors Gear, Inc. USA: 1-800-572-8822 www.eurekacamping.com Johnson Outdoors Canada Canada: 1-800-263-6390 www.eurekatentscanada.com

#### **TENT TIPS**

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

## **TENT CARE**

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

#### WARRANTY

• Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.