



- 1** Identify all tent components (see list below).

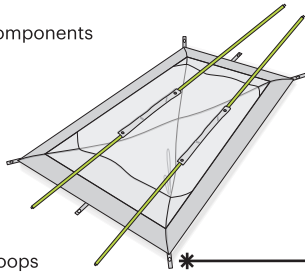


- 3** Assemble 2 main poles and insert into pole sleeves located above front + rear doors.

- 4** Insert main pole tips into each of the 4 corner grommets.


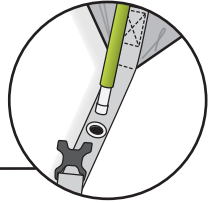


- 2** Spread out tent body + locate 4 corner webbing loops with grommets.


- 5** Construct the roof pole assembly.

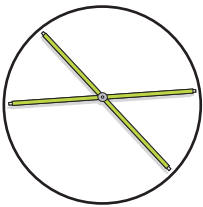


- 6** With the hub clip attachment facing down, insert roof pole tips into the 4 blue webbing grommets located on the main pole sleeves.

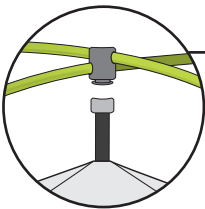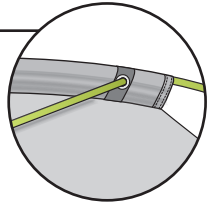

- 7** Locate tent peak clip + attach to underside of hub.

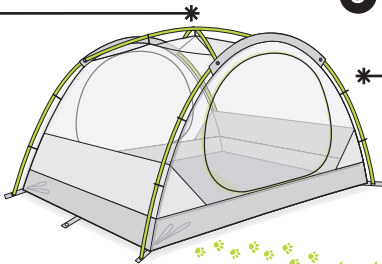

- 8** Attach all tent body clips to poles.

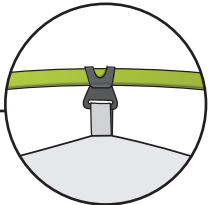


- 9** Stake out 4 corners and 2 sides of tent.



- 10** Place fly over tent body. Locate hook + loop fasteners on underside of fly and attach to tent poles. Attach tent body to fly via connectors on side of tent.

- 11** Connect matching buckles on fly + tent body at 4 corners. Adjust fly tension via corner webbing. Stake out vestibules. Stake out all guylines.

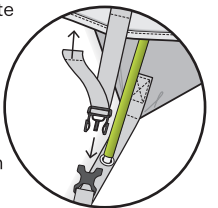

### TENT CONTENTS

Tent body + Tent fly  
Main poles (2)  
Roof pole assembly (1)  
Stakes (15)  
Guylines (6)  
Gear caddy

### QUESTIONS?

Johnson Outdoors Gear, Inc.  
USA: 1-800-572-8822  
[www.eurekacamping.com](http://www.eurekacamping.com)  
Johnson Outdoors Canada  
Canada: 1-800-263-6390  
[www.eurekatentscanada.com](http://www.eurekatentscanada.com)

### TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior air flow by using the High/Low Air Exchange fly feature and/or fly zipper vents.

### TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

### WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.